



Position	Description	Reference
1	Float	R0539700
2	Screw 4*16mm (set of 5)	R0608500
3	Main housing 2wd ii	R0589100
4	Flow outlet	R0517500
5	Motor screen	R0517600
6	Propeller	R0517000
7	Brush roller	R0517400
8	Caddy handle	R0565000
9	Caddy tube	R0565200
10	Roller support	R0518700
11	Caddy wheels (*2)	R0565100
12	Motor block shaft pin (set of 5)	R0567800
13	Floating cable plug	R0565600
14	Tire rear ral9022 zodiac	R0636301
15	Tire large ral9022 zodiac	R0636200
16	Floating cable 18m	R0516800
17	Handle blue	R0540400
18	Rim rear pms2915 zodiac	R0636101
19	Rim large pms2915 zodiac	R0636002
20	Control unit type 5v	R0637300
21	Motor block type a	R0637800
22	Caddy accessories	R0564900
23	Cover	R0638200
24	Wheel bushing zodiac	R0636700
25	Caddy base	R0564800
26	Brush type 1 pms2915 zodiac (*2)	R0635901
27	Floating cable clamp (set of 5)	R0567900
28	Drive gear (set of 2)	R0518800
29	Roller (set of 2)	R0518100
30	Fine filter v	R0636600
31	Filter canister support	R0517700
32	Transmission	R0517200
33	Cover latch grip pms108	R0638700
34	Rampe	R0519000
35	Screw 4*12 mm (set of 5)	R0516700
36	Screw 4*25 mm (set of 5)	R0638900
37	17 Gear (*2)	R0639000
38	Outer bearing (*2)	R0639100
39	Screw 2.9*9.5 Mm (set of 5)	R0639200
40	Screw 2.2*6,5Mm (*5)	R0564500